

Tec4med

Packing instructions

Inlay: Multi-Use Box High Performance 17 liters

● Preconditioning

Ensure that the PCM cold packs have been correctly preconditioned according to the Tec4med recommendations.



● Open



Open the lid of your Passive Shipper. Note: Before packing, make sure that the PCMs have been sufficiently preconditioned.

● Packing

Place a PCM set (4 units) on the bottom of the Passive Shipper.



Packing

[Optional] Place a PCM set [4 units] on the inner walls of the long side, 2 units on each side, for runtime extension.



Packing



Insert the hygienic inner tray over the PCM units. You can then place the products to be transported in the Passive Shipper.

Packing

Then insert the cold pack holder and place a PCM set [4 units] on the PCM holder. [Optional] Insert the TempBeacon into the recess provided in the PCM holder.



Packing



Put on the insulating lid.

Make sure that the lid is placed correctly.

Closing

Close the outer cover and make sure that the Passive Shipper is closed correctly.



Tec4med

Packing instructions

Inlay: Multi-Use Box High Performance 4 liters

● Preconditioning

Ensure that the PCM cold packs have been correctly preconditioned according to the Tec4med recommendations.



● Open



Open the lid of your Passive Shipper. Note: Before packing, make sure that the PCMs have been sufficiently preconditioned.

● Packing

Place three PCM units (one unit on the bottom and two on the long sides) in the Passive Shipper.



Packing



Insert the hygienic inner tray over the PCM units. You can then place the products to be transported in the Passive Shipper

Packing

Then insert the PCM holder and place the remaining PCM unit in the recess.

[Optional] Insert the TempBeacon into the recess provided in the PCM holder.



Packing



Put on the insulating lid.

Make sure that the lid is placed correctly.

Closing

Close the outer cover and make sure that the Passive Shipper is closed correctly.



Tec4med

Packanleitung

Inlay: Multi-Use Box High Performance 17 Liter

● Vorkonditionierung

Vergewissern Sie sich, dass die PCM-Kühlakkus korrekt vorkonditioniert wurden gemäß den Empfehlungen von Tec4med.



● Öffnen



Öffnen Sie den Deckel Ihrer Box. Hinweis: Vergewissern Sie sich vor dem Verpacken, dass die PCMs ausreichend vorkonditioniert worden sind.

● Verpacken

Legen Sie einen PCM-Satz (4 Stück) auf den Boden einer Box.



Verpacken

[Optional] Bringen Sie ein PCM-Set (4 Stück) an den Innenwänden der Längsseite an, 2 Stück auf jeder Seite, um die Laufzeit zu verlängern.



Verpacken



Legen Sie die hygienische Innenschale über die PCM. Anschließend können Sie die zu transportierenden Produkte in die Box legen.

Verpacken

Setzen Sie dann den Kühlakkushalter ein und legen Sie ein PCM-Set (4 Stück) auf den PCM-Halter. [Optional] Setzen Sie die TempBeacon in die Aussparung im PCM-Halter ein.



Verpacken



Setzen Sie den Isolierdeckel auf.
Achten Sie darauf, dass der Deckel richtig aufgesetzt ist.

Verschließen

Schließen Sie die äußere Abdeckung und vergewissern Sie sich, dass die Box richtig geschlossen ist.



Tec4med

Packanleitung

Inlay: Multi-Use Box High Performance 4 Liter

● Vorkonditionierung

Vergewissern Sie sich, dass die PCM-Kühlakkus korrekt vorkonditioniert wurden gemäß den Empfehlungen von Tec4med.




● Öffnen



Öffnen Sie den Deckel Ihrer Box. Hinweis: Vergewissern Sie sich vor dem Verpacken, dass die PCMs ausreichend vorkonditioniert worden sind.

● Verpacken

Legen Sie drei PCM-Einheiten (eine Einheit an der Unterseite und zwei an den Längsseiten) in die Box.

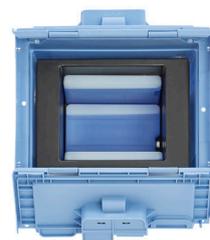

Verpacken



Legen Sie die hygienische Innenschale über die PCM-Einheiten. Anschließend können Sie die zu transportierenden Produkte in die Box legen.

Verpacken

Setzen Sie dann den PCM-Halter ein und platzieren Sie die verbleibende PCM-Einheit in der Aussparung.

[Optional] Setzen Sie den TempBeacon in die dafür vorgesehene Aussparung im PCM-Halter ein.



Verpacken



Setzen Sie den Isolierdeckel auf.

Achten Sie darauf, dass der Deckel richtig aufgesetzt ist.

Schließen

Schließen Sie die äußere Abdeckung und vergewissern Sie sich, dass der die Box richtig geschlossen ist.

