

Temperature data - Inlay: Thermo High Performance

Summary Temperature Data


Box size	Volume	Amount cooling units	Temperature	Runtime
MBHP43	4 liters	4 [1x PCM Set]	-25 ... -15 °C	20 h ISTA 7E summer
MBHP43	4 liters	4 [1x PCM Set]	2 ... 8 °C	50 h AFNOR St-96a
MBHP43	4 liters	4 [1x PCM Set]	2 ... 8 °C	48 h ISTA 7E summer
MBHP43	4 liters	4 [1x PCM Set]	2 ... 8 °C	>64 h AFNOR St-96d
MBHP43	4 liters	4 [1x PCM Set]	2 ... 8 °C	>160 h ISTA 7D winter
MBHP43	4 liters	4 [1x PCM Set]	15 ... 25 °C	110 h ISTA 7E summer
MBHP64	17 liters	Dry ice	-78 °C	105 h ISTA 7E summer
MBHP64	17 liters	12 [3x PCM Set]	-25 ... -15 °C	30 h ISTA 7E summer
MBHP64	17 liters	8 [2x PCM Set]	2 ... 8 °C	38 h ISTA 7E summer
MBHP64	17 liters	12 [3x PCM Set]	2 ... 8 °C	48 h ISTA 7E summer
MBHP64	17 liters	12 [3x PCM Set]	2 ... 8 °C	54 h AFNOR St-96a
MBHP64	17 liters	12 [3x PCM Set]	2 ... 8 °C	>64 h AFNOR St-96d
MBHP64	17 liters	12 [3x PCM Set]	2 ... 8 °C	>160 h ISTA 7D winter
MBHP64	17 liters	12 [3x PCM Set]	15 ... 25 °C	148 h ISTA 7E summer

Temperature profiles

Multi-Use Box High Performance 4 liters:


Inlay: Thermo High Performance 4 l [Box 400x300] + 1 PCM Set [-25 ... -15 °C]

Temperature Profile: ISTA 7E 72 h summer

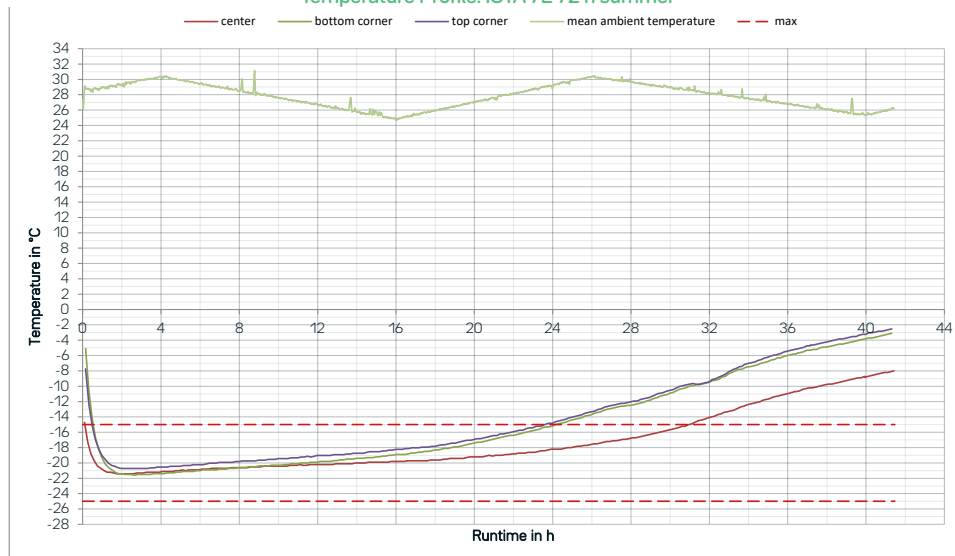


Inlay: Thermo High Performance 4 l [Box 400x300] + 1 PCM Set [2 ... 8 °C]

Temperature Profile: AFNOR St-96a

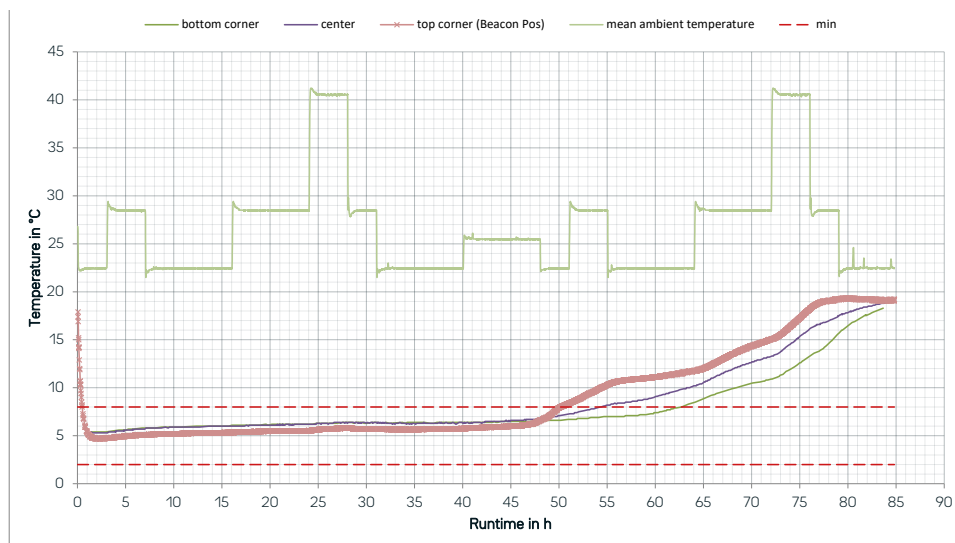


Inlay: Thermo High Performance 4 l [Box 400x300] + 1 PCM Set [2 ... 8 °C]

Temperature Profile: ISTA 7E 72 h summer

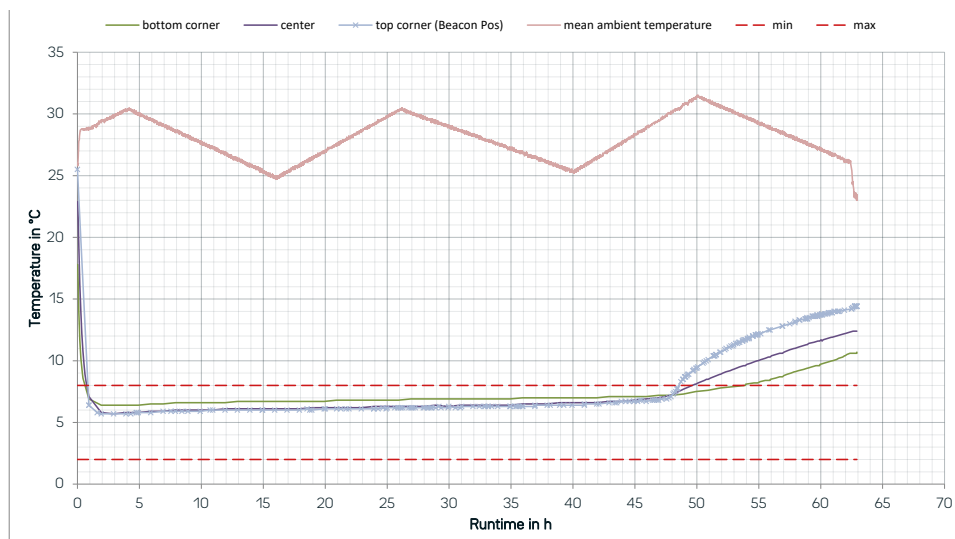


Inlay: Thermo High Performance 4 l (Box 400x300) + 1 PCM Set [2 ... 8 °C]

Temperature Profile: AFNOR St-96d

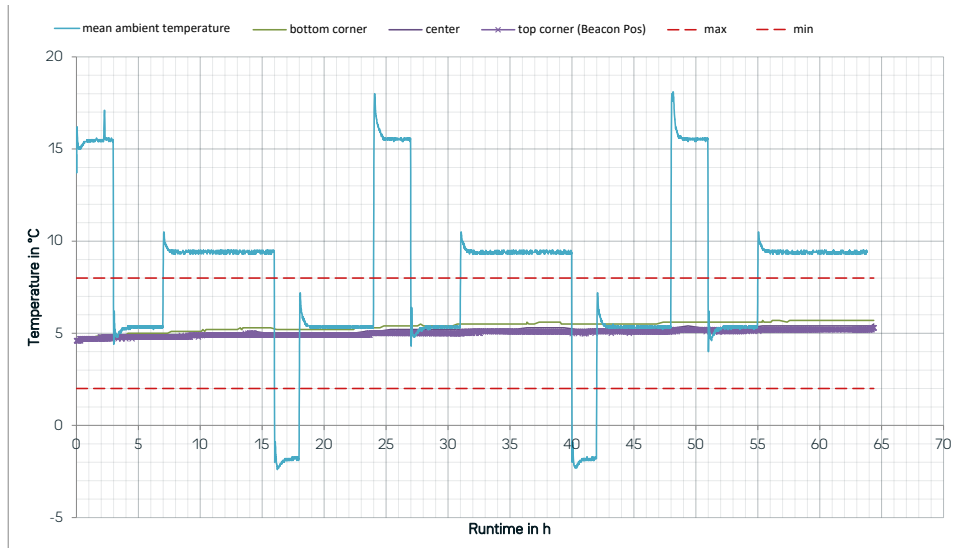


Inlay: Thermo High Performance 4 l (Box 400x300) + 1 PCM Set [2 ... 8 °C]

Temperature Profile: ISTA 7D winter

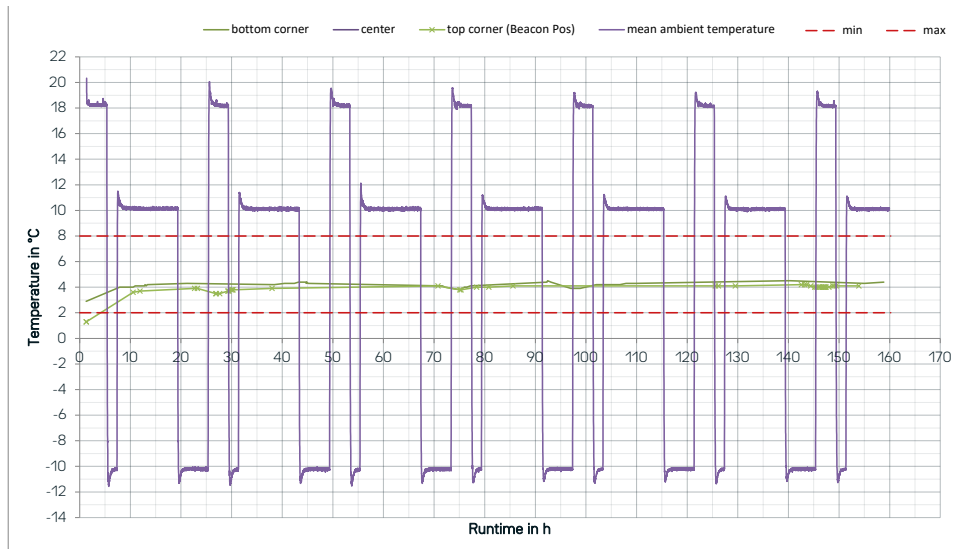

Inlay: Thermo High Performance 4 l (Box 400x300) + 1 PCM Set [2 ... 8 °C]


Temperature Profile: ISTA 7E summer

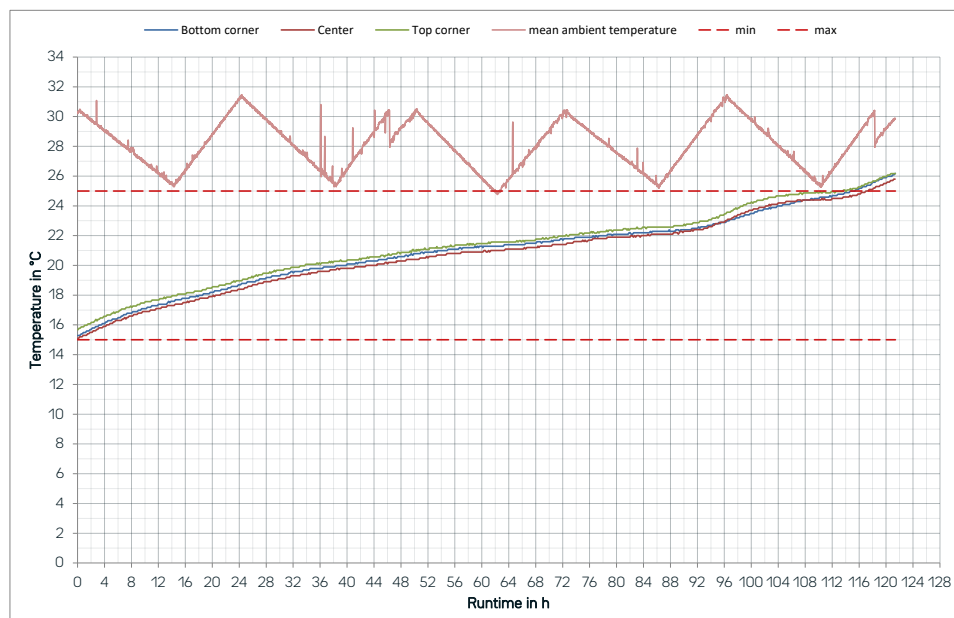

Multi-Use Box High Performance 17 liters:


Inlay: Thermo High Performance 17 l (Box 600x400) + Dry Ice [-78 °C]

Temperature Profile: ISTA 7E summer

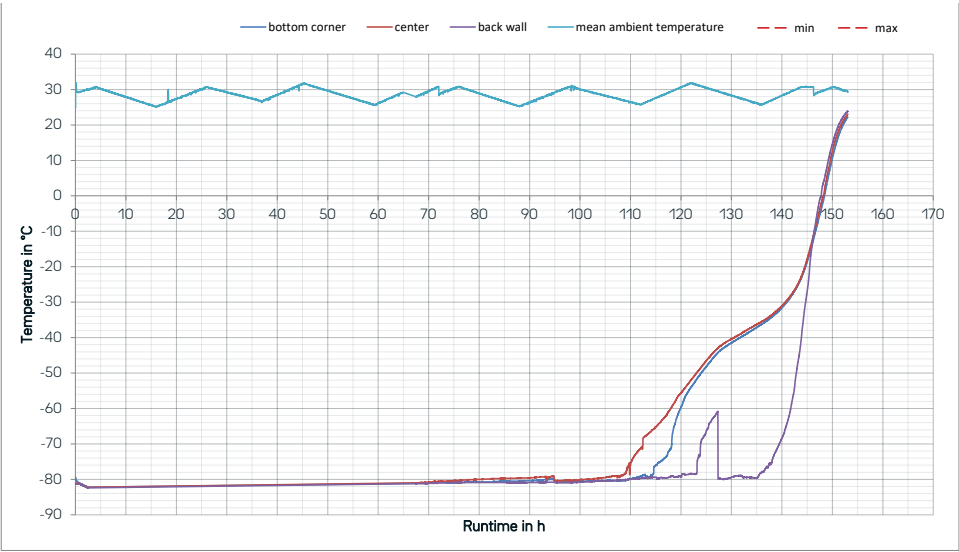


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set [-25 ... -15 °C]

Temperature Profile: ISTA 7E summer

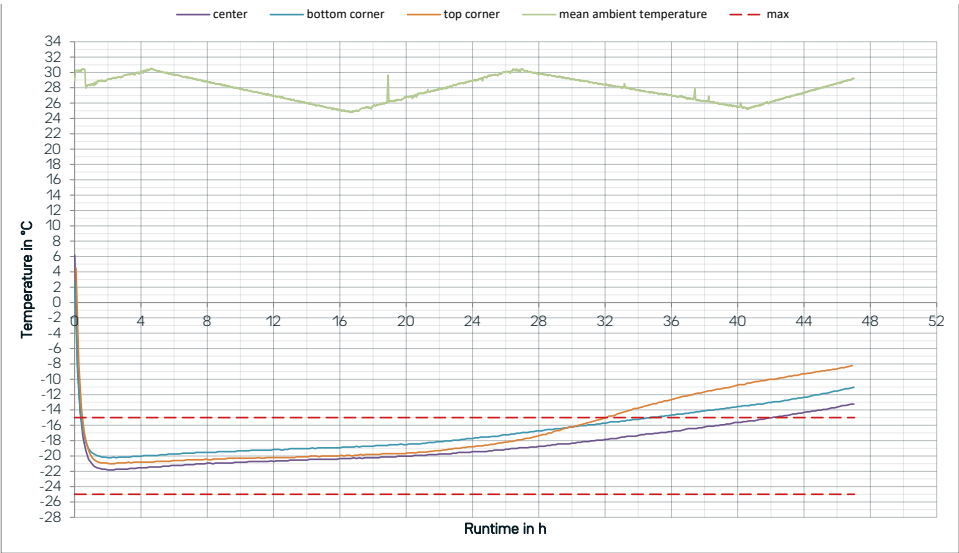


Inlay: Thermo High Performance 17 l (Box 600x400) + 2 PCM Set [2 ... 8 °C]

Temperature Profile: ISTA 7E summer

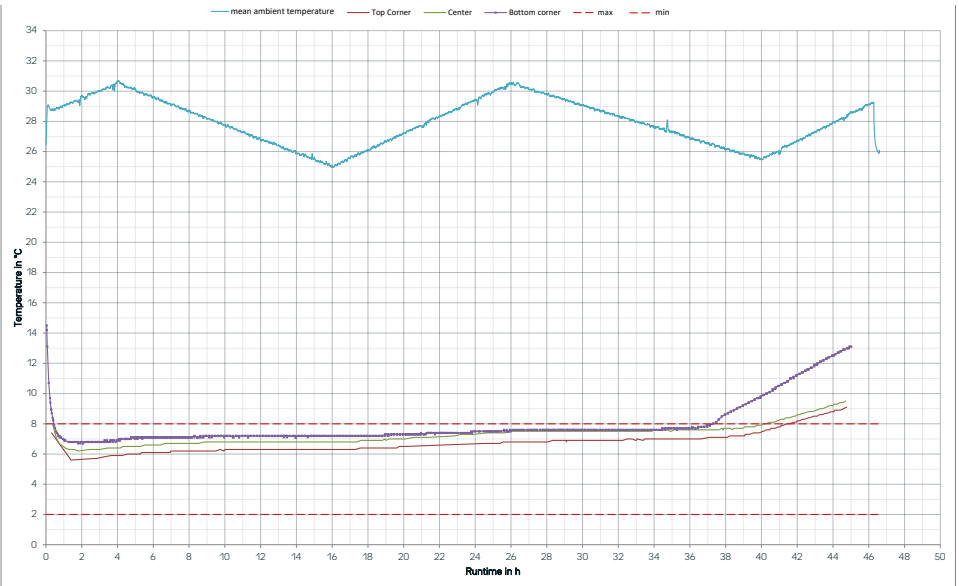


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperature Profile: ISTA 7E summer

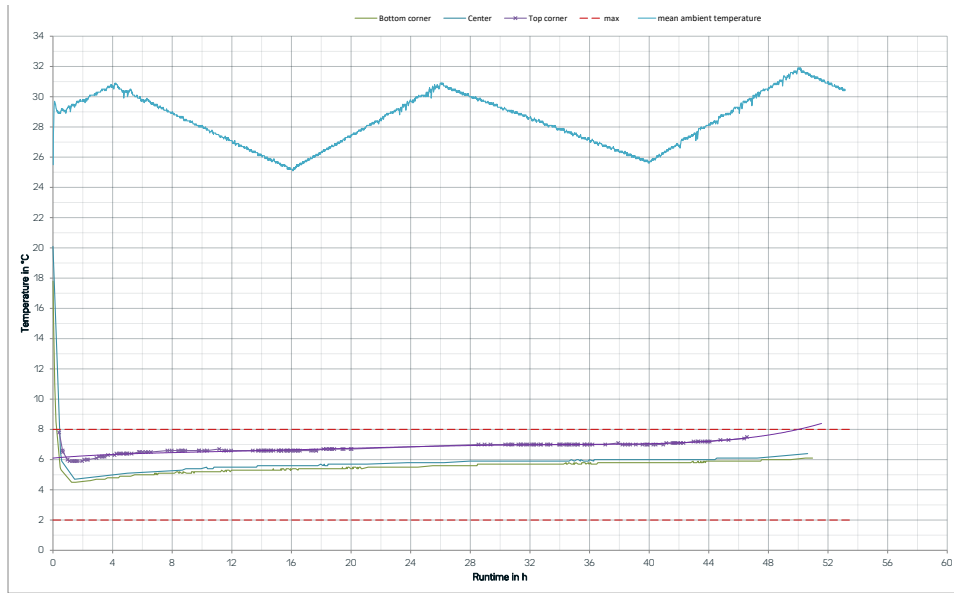


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperature Profile: AFNOR St-96a

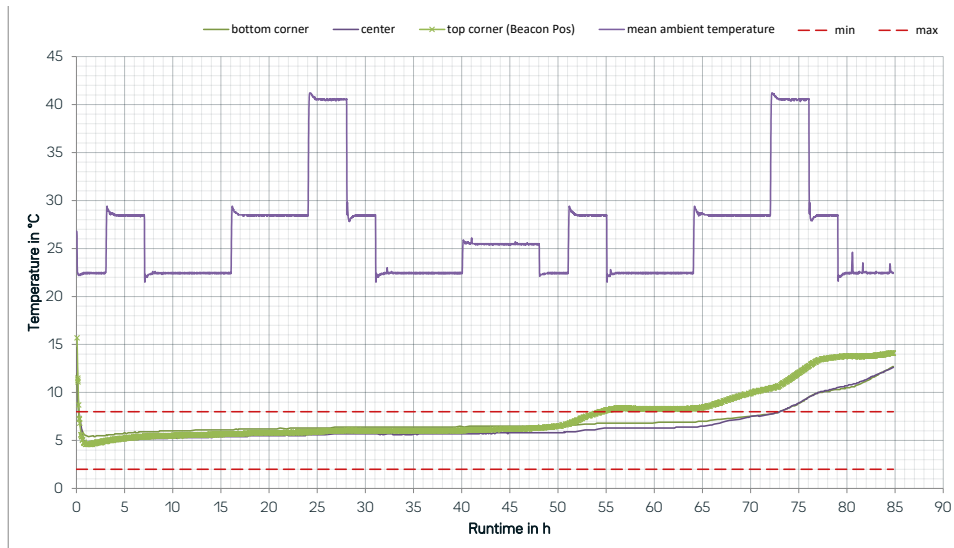


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperature Profile: AFNOR St-96d

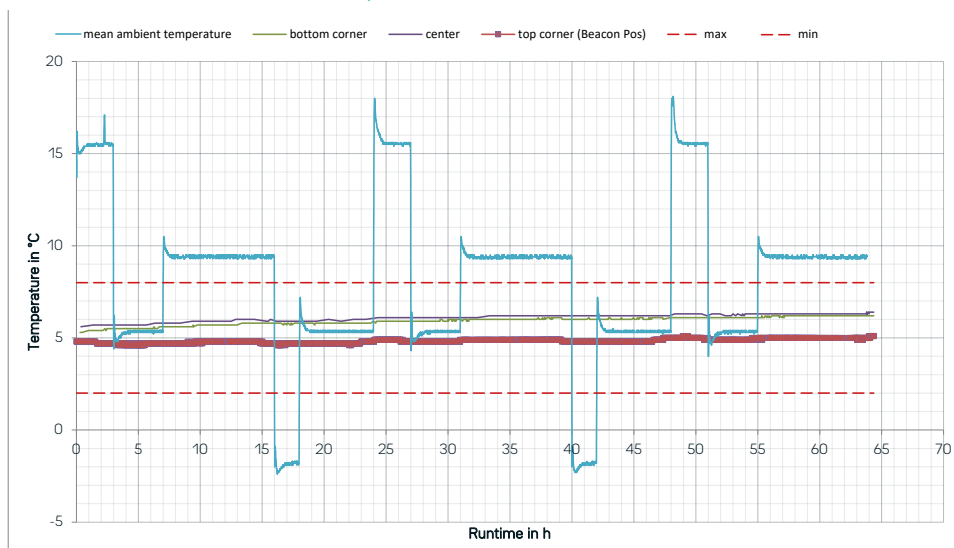


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperature Profile: ISTA 7D winter

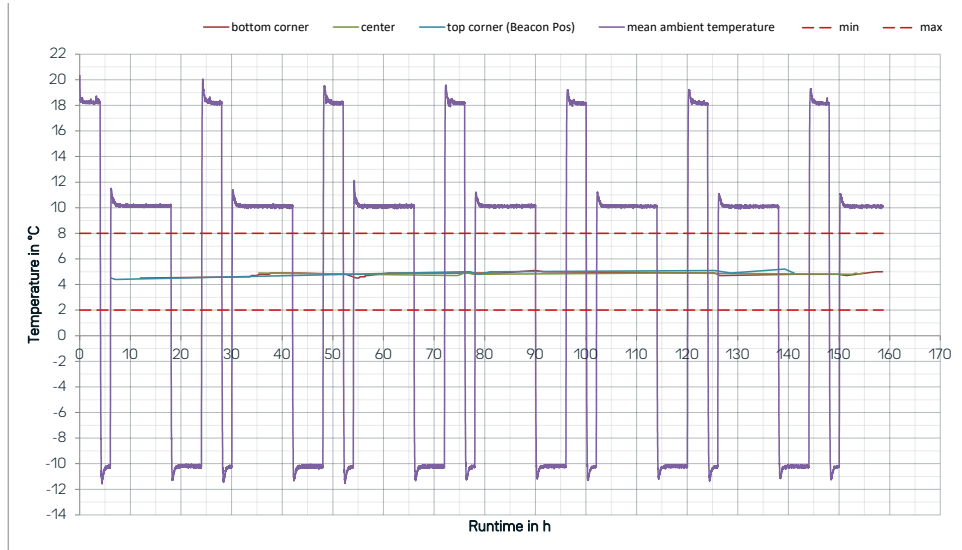

Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (15 ... 25 °C)

Temperature Profile: ISTA 7E summer

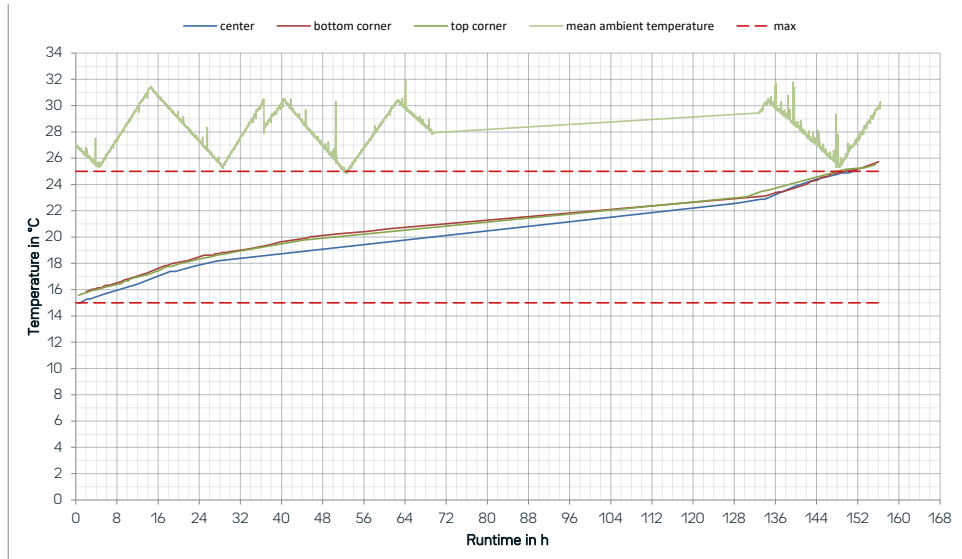

Temperatur Daten - Inlay: Thermo High Performance


Zusammenfassung:

Box	Volumen	Anzahl Kühleinheiten	Temperatur	Laufzeit
MBHP43	4 Liter	4 [1x PCM Set]	-25 ... -15 °C	20 h ISTA 7E Sommer
MBHP43	4 Liter	4 [1x PCM Set]	2 ... 8 °C	50 h AFNOR St-96a
MBHP43	4 Liter	4 [1x PCM Set]	2 ... 8 °C	48 h ISTA 7E Sommer
MBHP43	4 Liter	4 [1x PCM Set]	2 ... 8 °C	>64 h AFNOR St-96d
MBHP43	4 Liter	4 [1x PCM Set]	2 ... 8 °C	>160 h ISTA 7D Winter
MBHP43	4 Liter	4 [1x PCM Set]	15 ... 25 °C	110 h ISTA 7E Sommer
MBHP64	17 Liter	Dry ice	-78 °C	105 h ISTA 7E Sommer
MBHP64	17 Liter	12 [3x PCM Set]	-25 ... -15 °C	30 h ISTA 7E Sommer
MBHP64	17 Liter	8 [2x PCM Set]	2 ... 8 °C	38 h ISTA 7E Sommer
MBHP64	17 Liter	12 [3x PCM Set]	2 ... 8 °C	48 h ISTA 7E Sommer
MBHP64	17 Liter	12 [3x PCM Set]	2 ... 8 °C	54 h AFNOR St-96a
MBHP64	17 Liter	12 [3x PCM Set]	2 ... 8 °C	>64 h AFNOR St-96d
MBHP64	17 Liter	12 [3x PCM Set]	2 ... 8 °C	>160 h ISTA 7D Winter
MBHP64	17 Liter	12 [3x PCM Set]	15 ... 25 °C	148 h ISTA 7E Sommer

Multi-Use Box High Performance 4 Liter:


Inlay: Thermo High Performance 4 l [Box 400x300] + 1 PCM Set [-25 ... -15 °C]

Temperatureprofil: ISTA 7E 72 h Sommer

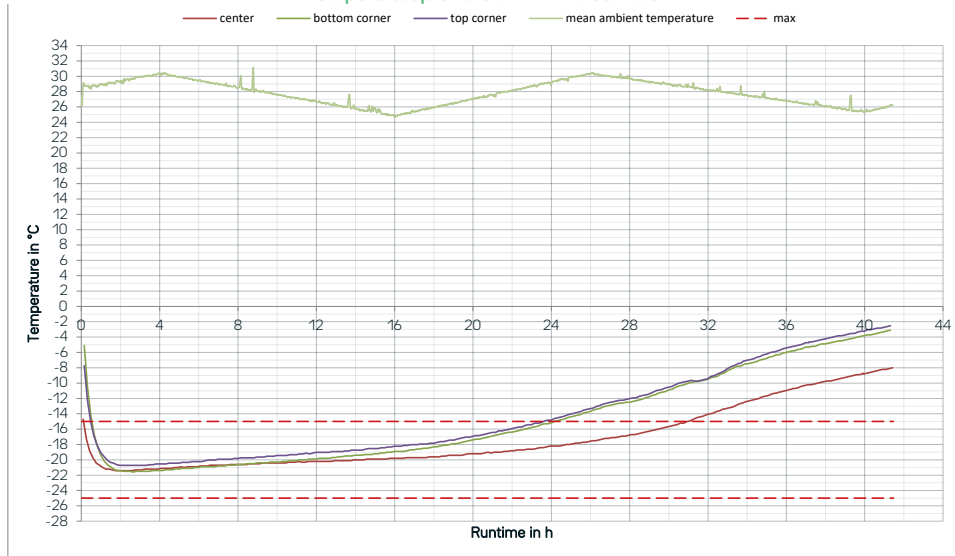


Inlay: Thermo High Performance 4 l [Box 400x300] + 1 PCM Set [2 ... 8 °C]

Temperatureprofil: AFNOR St-96a

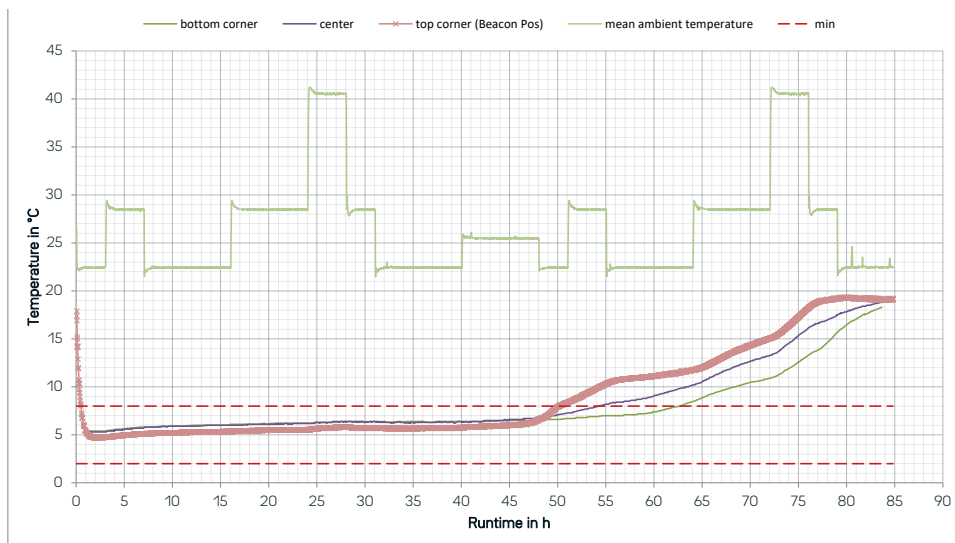


Inlay: Thermo High Performance 4 l [Box 400x300] + 1 PCM Set [2 ... 8 °C]

Temperatureprofil: ISTA 7E 72 h Sommer

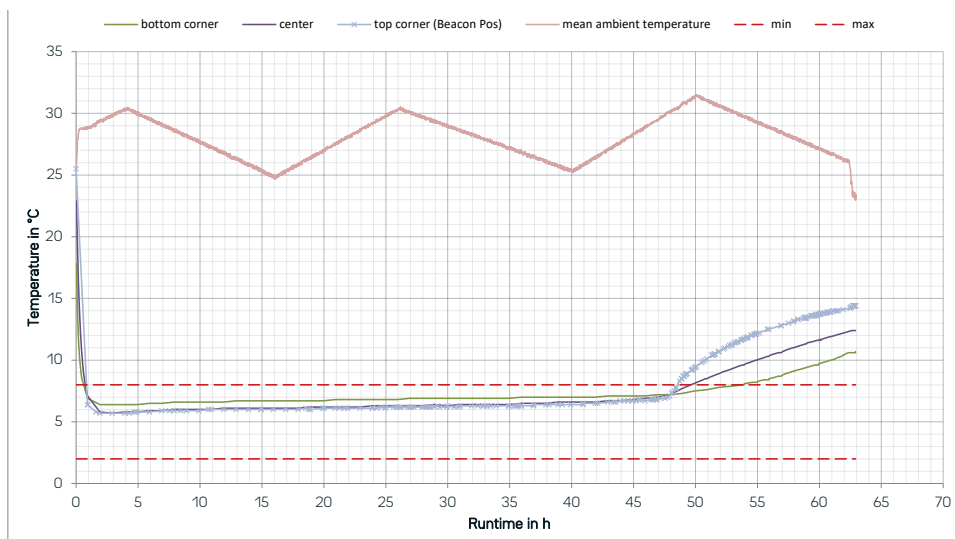


Inlay: Thermo High Performance 4 l (Box 400x300) + 1 PCM Set [2 ... 8 °C]

Temperatureprofil: AFNOR St-96d

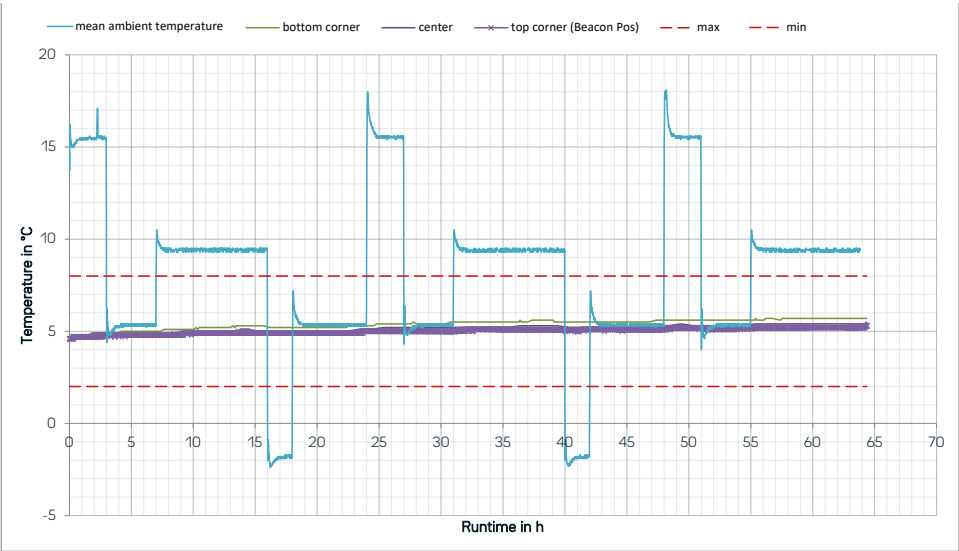


Inlay: Thermo High Performance 4 l (Box 400x300) + 1 PCM Set [2 ... 8 °C]

Temperatureprofil: ISTA 7D Winter

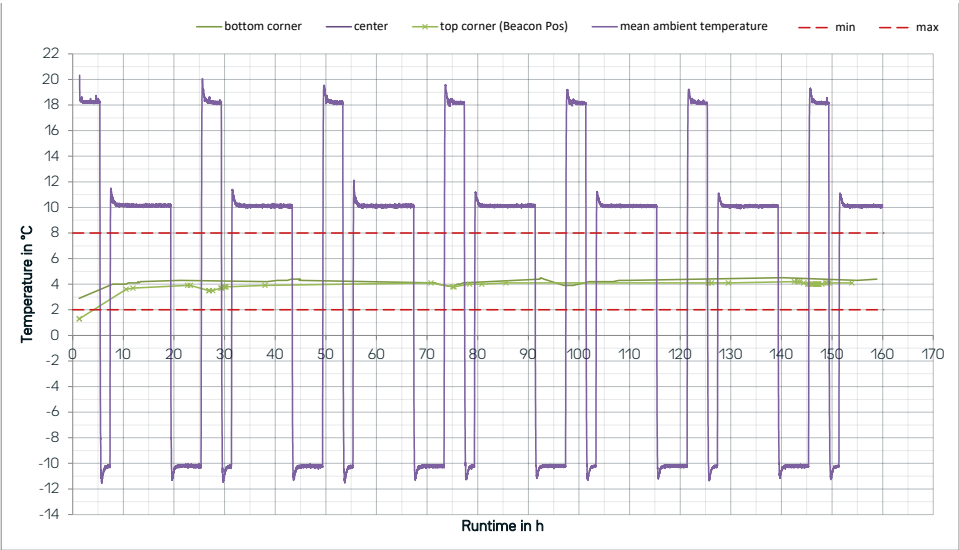


Inlay: Thermo High Performance 4 l (Box 400x300) + 1 PCM Set [2 ... 8 °C]

Temperatureprofil: ISTA 7E Sommer

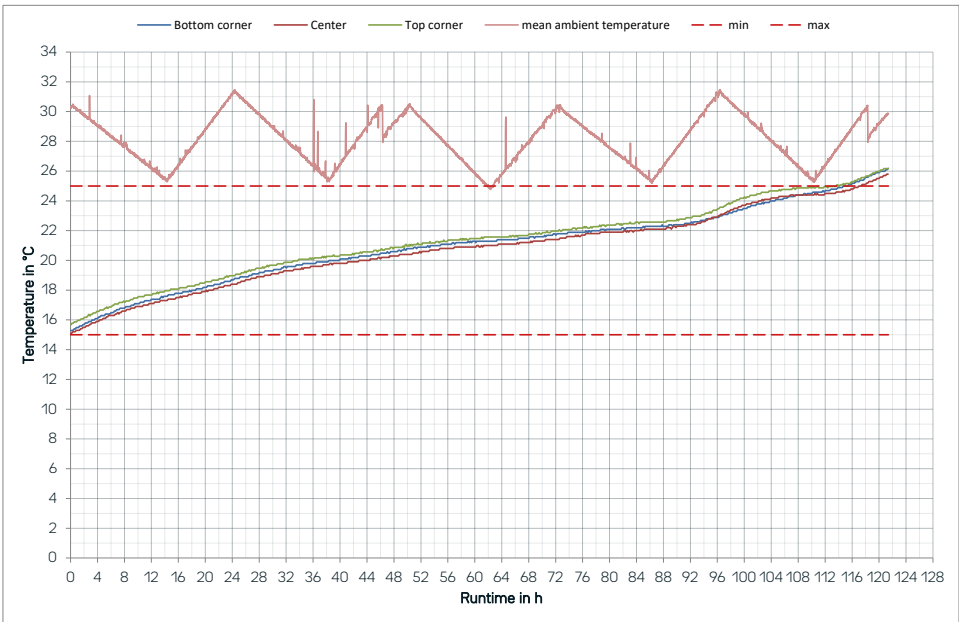


Multi-Use Box High Performance 17 liters:


Inlay: Thermo High Performance 17 l (Box 600x400) + Trockeneis [-78 °C]
Temperatureprofil: ISTA 7E Sommer

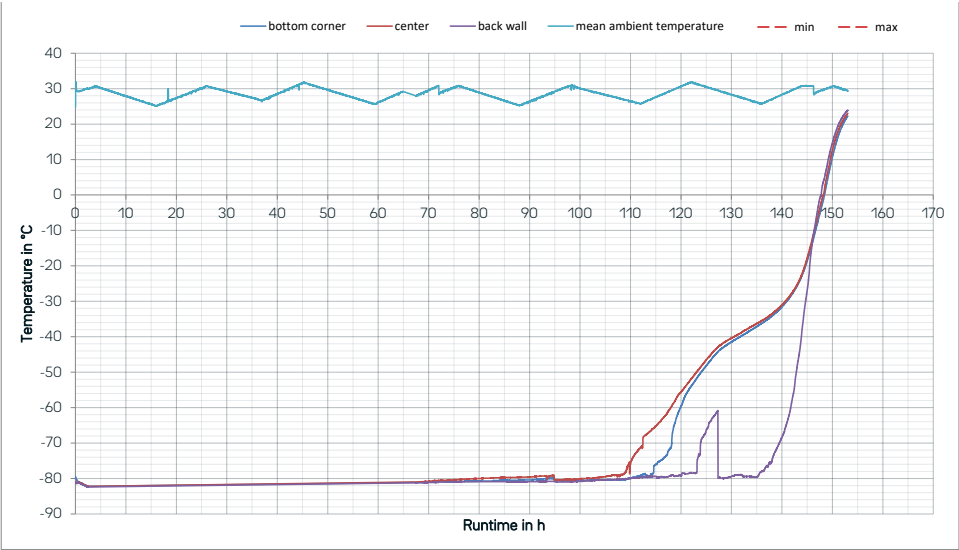

Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set [-25 ... -15 °C]
Temperatureprofil: ISTA 7E Sommer

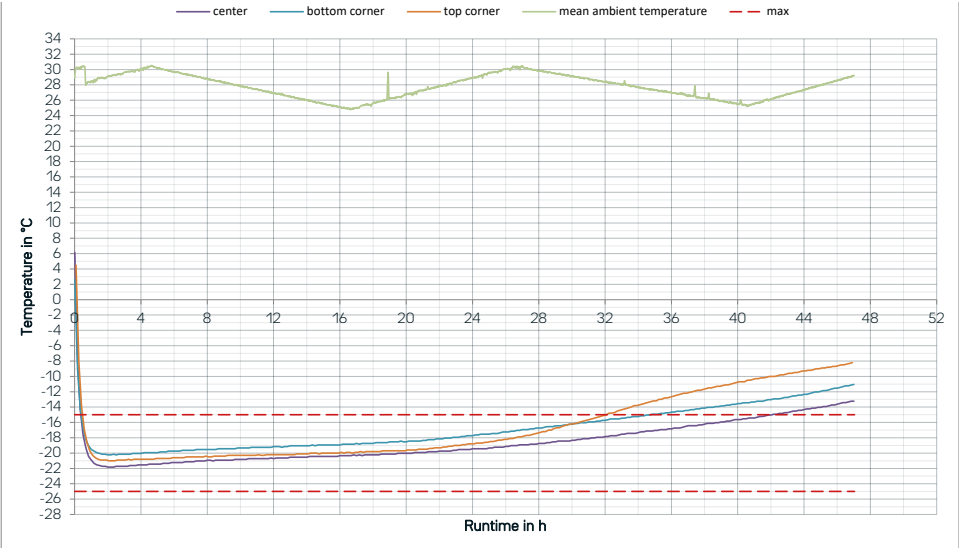


Inlay: Thermo High Performance 17 l (Box 600x400) + 2 PCM Set [2 ... 8 °C]
Temperatureprofil: ISTA 7E Sommer

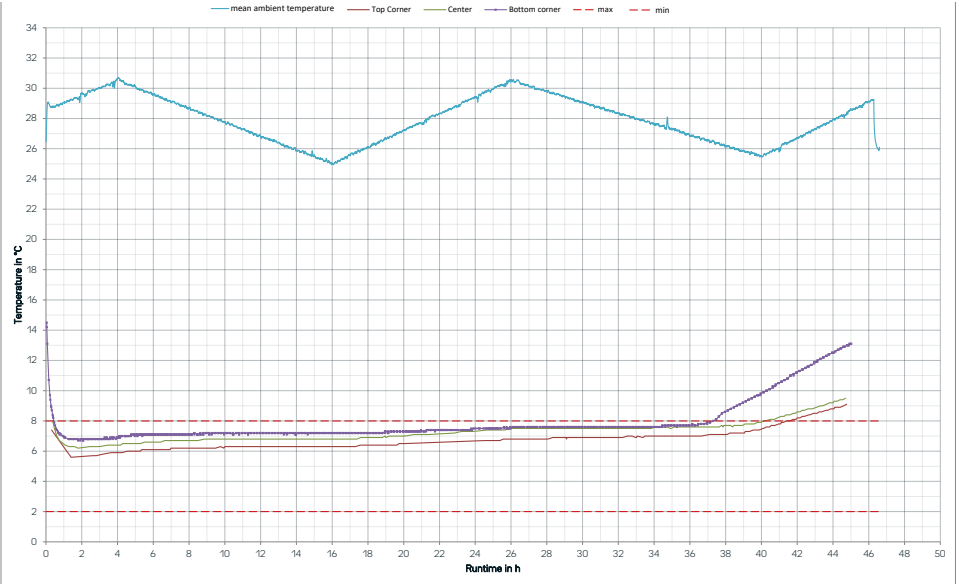


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperatureprofil: ISTA 7E Sommer

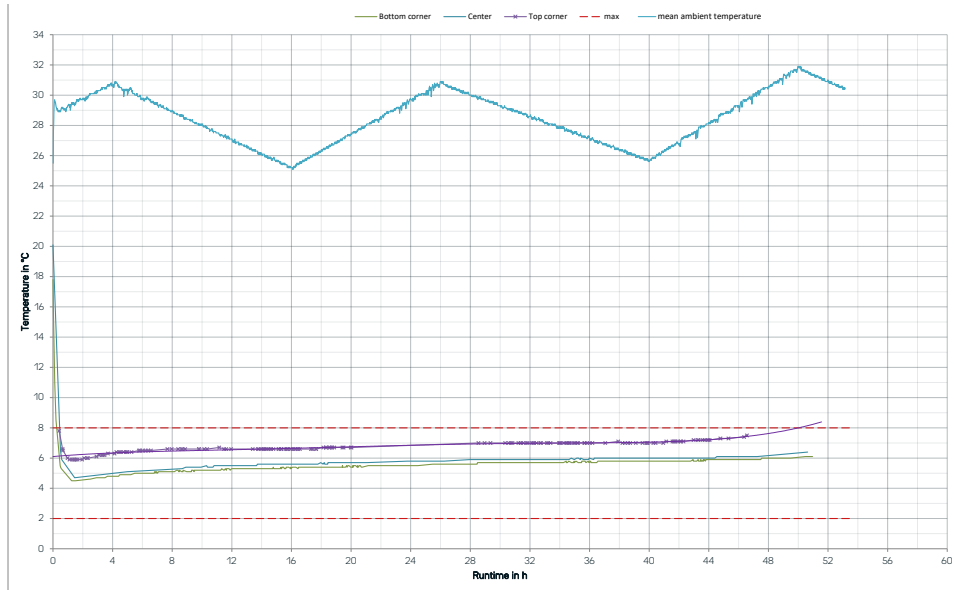


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperatureprofil: AFNOR St-96a

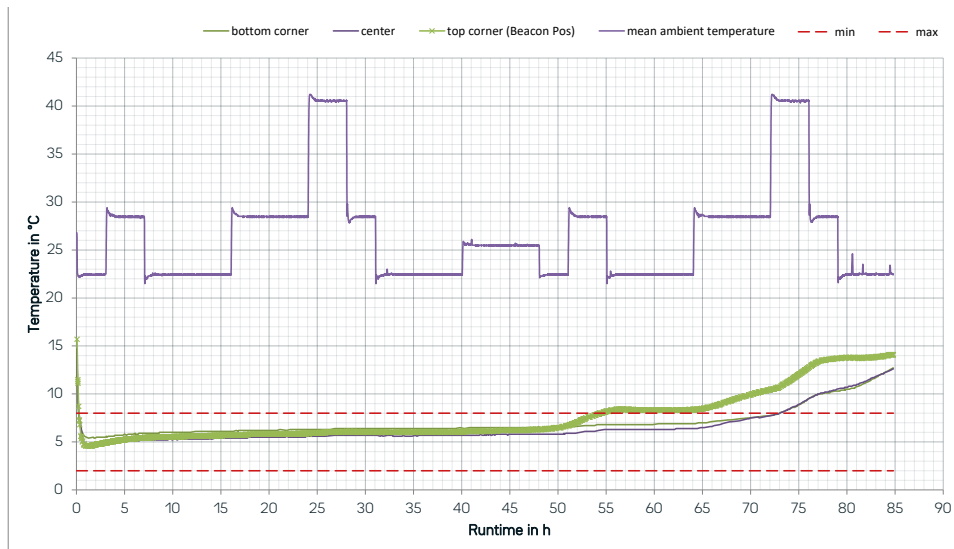


Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperatureprofil: AFNOR St-96d

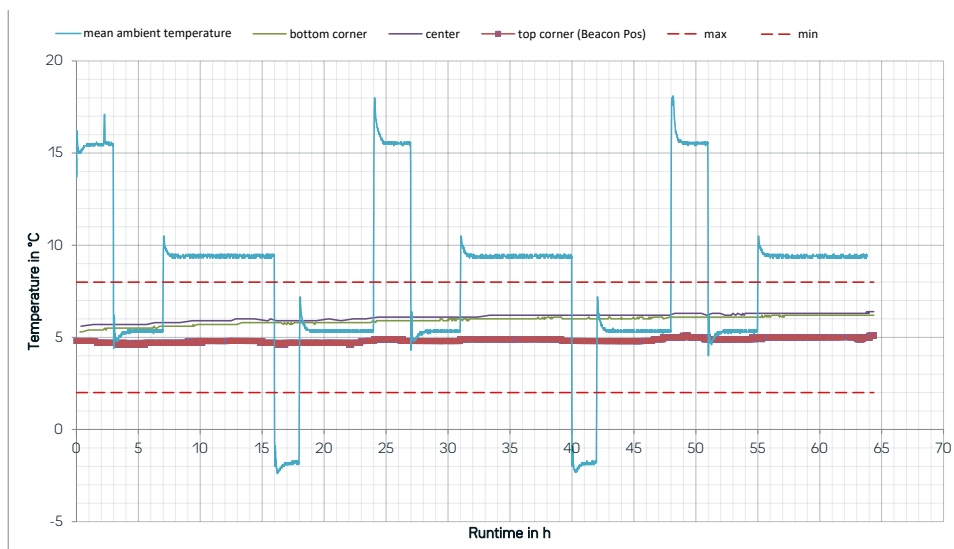

Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (2 ... 8 °C)

Temperatureprofil: ISTA 7D Winter

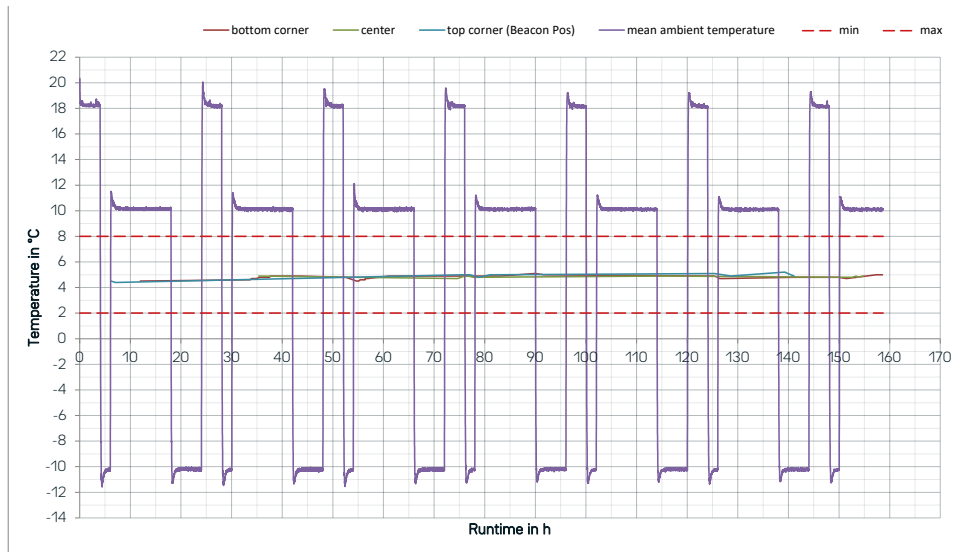

Inlay: Thermo High Performance 17 l (Box 600x400) + 3 PCM Set (15 ... 25 °C)

Temperatureprofil: ISTA 7E Sommer

